

# Exit Devices

## Accessories

Various replacement and accessories for our exit device range.



### MX002

Plastic alternative to glass for CP15 and CP21 range.



### CP-GLASS-N

Replacement clear glass for CP15, CP21, CP15N and CP21N.



### MX003-N

Clear plastic cover for CP15, CP21, CP22, CP15N, CP22N, CP22-3N, CP21N and CP22N-EDR.




### CP24-G-COVER

Clear plastic cover for CP24G.



### PS200

Clear plastic cover for CP22-3WP.

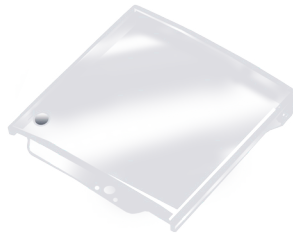

### MCP330-PRO COVER

Clear plastic cover for MCP330-PRO.



### MCP330-PRO KEY

Clear plastic key for MCP330-PRO.



### CP22-KEY

Black plastic key for CP22.



### CP22-KEY-N

Black plastic key for CP15, CP15-N, CP21, CP21-N, CP22-N and CP22N-EDR.



### CP22-3-N KEY

Black plastic key for CP22-3.



### CP22-3-N-KEY

Black plastic key for CP22-3.



### BG1 KEY

Black plastic key for BG1 and BG1G.