




CTB SURFACE CABLE BAR SERIES. 650MM/750MM/850MM

PARTS LIST

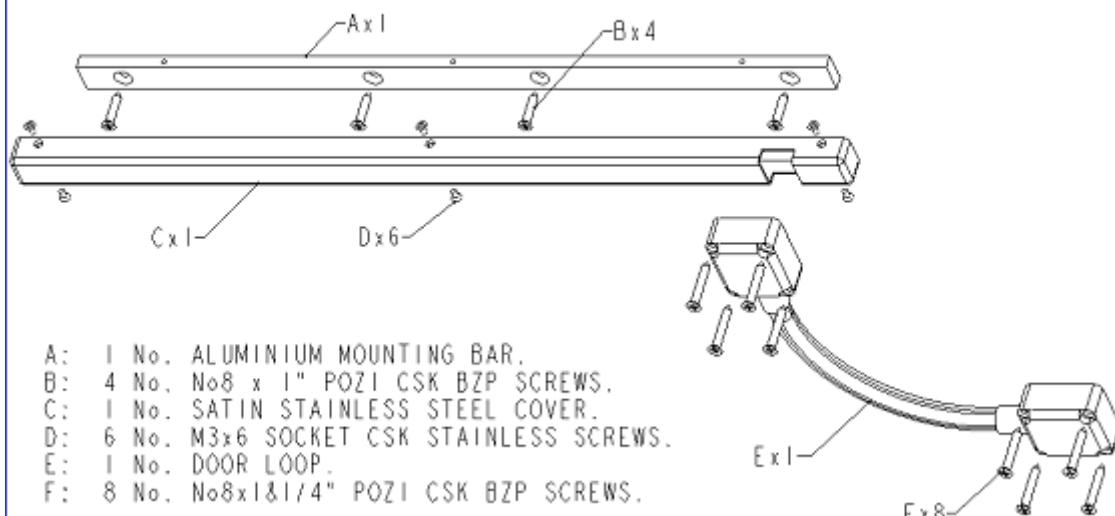


INSTRUCTIONS

STEP 1:
 SCREW PART A USING PART B TO THE DOOR.
 POSITION CENTRALLY OR TO YOUR OWN REQUIREMENTS.



STEP 2:
 DRILL 1 No. 10mm OR UNDER CABLE HOLE IN THE DOOR.
 POSITION LEFT OR RIGHT HAND TO MEET YOUR REQUIREMENTS.
 HOLE TO BE NO MORE THAN 10mm FROM THE EDGE OF PART A.



STEP 3:
 FEED CABLE THROUGH DOOR HOLE, ALONG PART A
 AND THROUGH PART C CUT OUT.
 PLACE PART C OVER PART A AND SCREW TOGETHER WITH PART D.



STEP 4:
 RUN CABLE THROUGH PART E AND PLACE PART E OVER PART C.
 SCREW PART E TO THE DOOR USING PART F.
 SCREW PART E TO WALL/DOOR FRAME USING PART F.

